



# NEW NISSAN MAGNITE

## QUICK REFERENCE GUIDE



## CUSTOMER RELATIONS

Hotline: (+94) 117 609 609  
No: 185, Union Place, Colombo 2, Sri Lanka.

# NEW NISSAN MAGNITE



Dear Customer,

Please take a few minutes to read this Quick Reference Guide, which contains the information necessary for you to:

- Quickly familiarize yourself with your vehicle.
- Easily use the key features of your vehicle.
- Get the best performance from your vehicle by following these simple instructions.

NOTE: QRG contents based on the top most variant, so it's not necessary that all features will be available with the vehicle.

## LOOKING FOR MORE INFORMATION

Quick Reference Guide does not replace your vehicle's owner's manual. It provides comprehensive information about your vehicle. For additional information you should always refer to the owner's manual or your nearest authorized dealer.

# NEW NISSAN MAGNITE




## DESCRIPTION

To get Better Fuel Economy

## NISSAN GUIDELINE

**3000KM**

Measure fuel consumption after 3000 kms or running-in period to get actual value.

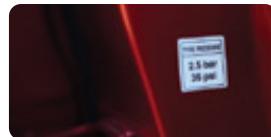

Check your tyre inflation pressure every two weeks. (Refer Driver-side door for recommended pressure placard)



Use appropriate gear with respect to vehicle speed. Refer Note 1 in Page No. 13 for gear-shift table.



Avoid unnecessary speeding and hard acceleration.



Do not rest foot on clutch & brake pedal while driving.



To get accurate Fuel Economy, Reset Avg. Fuel Economy in Trip meter during refuelling or every 200 Kms.

For Manual Calculation method, please refer Note 2 in Page No.13.



AC usage will take some load from Engine Power & may result in increased fuel consumption.

# NEW NISSAN MAGNITE



## DESCRIPTION

Points to remember while refuelling




## NISSAN GUIDELINE

During filling the fuel, always keep the engine in OFF condition for accurate reading of fuel in the tank.

To maintain your vehicle's health, you should refuel as soon as the low-fuel warning light activates and avoid letting the gauge needle hit empty.

Driving on a near empty tank can cause the electric fuel pump to overheat and may pull settled debris into the engine, leading to costly repairs.

To get best Acceleration

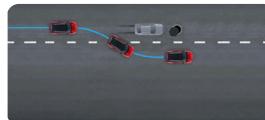

During sudden acceleration and overtaking, it is recommended to downshift the gears.

Proper Clutch Pedal Operation



Do not ride the clutch pedal. Do not keep your foot on the clutch pedal all the time, as this will cause it to slip, resulting in higher fuel consumption and damage to the clutch components.

Do not release the clutch pedal too quickly, it may result in engine stalling. Half clutch operation may lead to pedal vibration and reduce clutch life. Vehicles with Push Button ignition may not start sometimes if Clutch Pedal is not pressed fully.

Effective Gear Shifting Tips (MT)



- 1) Don't Shift Gears too quickly.
- 2) Don't use half clutch for gear shifting.
- 3) To change Gears up/down, Press Clutch pedal fully while shifting & then release it slowly.
- 4) Check the Clutch pedal free-play during every service.

For Reverse shifting (Type-2): Gear shift lever must be returned to Neutral (N) position before shifting into Reverse (R). The Button-1 must be pressed up while moving the shift lever into reverse.

Note: There can be gear grinding noise, If reverse gear is shifted too quickly or shifting happens while the vehicle is moving.

# NEW NISSAN MAGNITE



## DESCRIPTION

To get Quick AC Cooling



## NISSAN GUIDELINE

During outdoor parking in hot summer, Cabin temperature is generally hot.



Roll down the window halfway after Ignition ON Turn OFF AC → Select Fresh Air mode → Set blower speed maximum.



After 2 minutes  
Roll up window → Switch ON AC → Select Recirculation mode → Set blower speed to comfort level.



To remove Internal & External Fog

Internal Fog Removal: Select Fresh Air mode → Set desired temperature. (Minimum) → Set Blower speed to maximum → AC ON → Set to Front Defogger mode → Air vent towards side windows

External Fog Removal: Select Fresh Air mode → Set desired temperature (Maximum) → Set Blower speed to maximum → AC OFF → Set to Front Defogger mode → Air vent towards side windows



Safe Braking with ABS



Anti-Lock Braking System (ABS) prevents locking of wheels during brake application in slippery/wet road conditions. Pedal pulsation and clicking noise indicate activation of ABS ensuring safety.


# NEW NISSAN MAGNITE



## DESCRIPTION




## NISSAN GUIDELINE

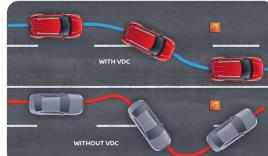

Vehicle Dynamic Control (VDC) automatically controls brakes and engine torque to enhance stability of the vehicle. During this activation, VDC warning lamp will blink.


The driver can manually deactivate the Traction Control System (TCS) function alone, to allow free wheel spin.

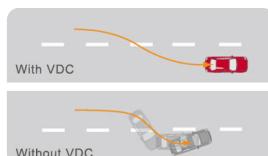

This is helpful in situations like car stuck in snow, or other soft surfaces or Off-Road driving.

ABS and the emergency functions remain active regardless.

## Hill start assist (HSA)

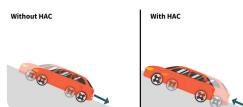

Hill Start Assist (HSA) prevents against rolling backwards when starting off on a slope.

Relieves driver stress in uphill traffic driving conditions.

## To have better wiper blade life



Keep wiper blade in uplift position under long parking on both hot and cold conditions.

Operate wiper only with water using washer fluid when it is not raining.

Wiping noise in heavy rain condition is a common phenomenon.

## Sun visor



To block glare from the front, swing down the sun visor towards windshield and park it parallel to windshield (1).

# NEW NISSAN MAGNITE



## DESCRIPTION

### Parking Brake Usage



## NISSAN GUIDELINE

Applying Parking Brake: Pull the parking brake lever (1) fully (8-16 notches).

Releasing Parking Brake:  
Pull the parking brake lever.

1. Slightly up
2. Push the button.
3. Lower the lever completely.

### Parking on Slopes



Apply parking brake fully when parking on an uphill, put the vehicle in 1st gear.

When the vehicle is on a downhill condition, put the vehicle in Reverse Gear.

### Know your Computer



### Trip switch



#### Odometer (Km)



#### Tripmeter (Km)



#### Fuel used (L)



#### Average fuel consumption (Km/l)

Total distance recorder. It displays the total distance the vehicle has been driven.

The trip distance recorder displays the distance of individual trips.

To Reset: press and hold the trip computer switch until the mileage recorder resets to zero.

Fuel consumed since last reset.

It shows the average fuel consumption since the last reset. The value is displayed after having travelled at least 400 meters since the last reset.

To reset: Press and hold the trip computer switch when the display is in Average fuel consumption.

# NEW NISSAN MAGNITE



## DESCRIPTION

### Know your Computer



### Trip switch



### Tire Pressure Monitoring System (TPMS)

## NISSAN GUIDELINE

Current fuel consumption (km/l)

**INST 30.0 km/l**

Cruising Range or distance to empty (km)

**RANGE --- km**

Distance travelled (km)



Average Speed (km/h)

**000.0 km/h**

Temperature

**000°C**

Time

**00:00 AM**

This value is displayed once a speed of 20 mph (30 km/h approximately) is reached. It calculates the instantaneous mileage based on your driving pattern.

Based on the display one can adjust your driving pattern for more economic driving.

The Autonomy distance value is calculated based on vehicle fuel consumption in the last 50 km and the amount of current fuel remaining in the tank.

Distance travelled since last reset. To reset: Press and hold the trip computer switch when the display is in Distance travelled.

Average speed since last reset. The value is displayed after driving 400 meters.

To reset : Press and Hold the trip computer switch when display is average speed.

Air temperature / Ambient temperature.

It shows the Clock.

Tire Pressure Monitoring System

(if equipped). When the ignition switch is in the "ON" position, the low tire pressure warning light illuminates and then turns off.



This indicates operation of the low tire pressure warning system. The Tire Pressure Monitoring System (TPMS) monitors the tire pressure of all tires except the spare.


# NEW NISSAN MAGNITE




## DESCRIPTION

### Know Your Fuel Gauge


#### Digital Fuel Gauge

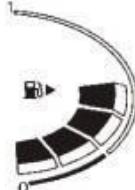

#### Low Fuel Warning

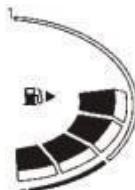

#### Temperature gauge

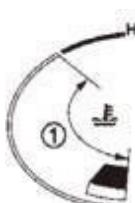

## NISSAN GUIDELINE

Indicates the fuel level in the fuel tank. Fuel tank capacity is 40 litres.

All 8 bars ON indicates that the tank is full. 1 bar ON indicates the driver that fuel level is low by alerting with a chime and Low fuel indicator enables in TFT.

Note: For accurate indication, before filling, it is recommended to switch off ignition, wait for at least 15 seconds and fill at-least 5 liters of fuel.

ECT gauge (Engine Coolant Temperature), the temperature of engine coolant using 8 level bars. All 8 bars ON indicates, the temperature is high around 114°C All 8 bars OFF indicates, the temperature is less than 6°C ECT gauge (Engine Coolant Temperature)

To use Headlamp leveler at different conditions



To maintain proper light focus on different load conditions follow the below table.

Load Status	Switch Position
Driver alone or with front passenger	0
Driver with one front passenger & three rear passenger	1
Driver with one front passenger, three rear passenger and luggage	2
Driver only and luggage	3

### Headlight Fog Condensation



Fog may temporarily form inside the lens of the exterior lights during rain or during car wash and this is not malfunction.

A temperature difference between inside & outside of the lens causes the fog.

# NEW NISSAN MAGNITE




## DESCRIPTION

To have better  
Vehicle Dynamics

## NISSAN GUIDELINE



Check wheel alignment at regular intervals.

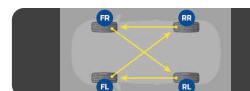

Tyre rotation should be done after every 10,000 Km/s.



Correct wheel balancing at regular intervals which also minimize steering vibrations.



Maintain proper tire pressure always.



Following above points will avoid Vehicle pulling, Tire uneven wear & Tire noise. Vehicle pull may occur if the road surface is not flat.

To Experience  
Good Sound Quality

Tips on Radio  
Reception



NISSAN recommends using Bass & Treble settings to "0".

Driving in bad weather (wind/ rainy day), through tunnel, Uphill & near Electrical tower will have some disturbances in Radio reception. This is common behavior for all cars considering Interference between signals.

Setting clock in  
audio



**Clock Operation:**  
Press ON in audio system, press SET-UP button --> Turn ENTER button --> To select CLOCK option --> Push ENTER.  
Sequence of clock setting:  
Set Time --> ON/OFF --> format--> Set time.

# NEW NISSAN MAGNITE



DESCRIPTION	NISSAN GUIDELINE
Advantage of Genuine Floor mats	 <p>NISSAN recommends using genuine floor mats for safety reasons. Non-genuine mats get slippage due to no locking (or lack of proper grip).</p>
To activate child lock function	 <p>This feature helps prevent the rear door accidentally being opened by children. The lever is on the inner side of each rear door.</p>
	 <p>When in lock condition, the rear door can be opened only from outside.</p>
Opening the Tail Gate	 <p>To open the tailgate, unlock it with one of the following operation, then pulling upwards. Push the Tailgate opener request switch, located under the tailgate handle, for more than 1 second while carrying the Nissan Intelligent key with you (that is, in your pocket or purse).</p> <p>Push the power door lock switch to the unlock position or Unlock button on the remote control once. The tailgate can be opened by pushing the button.</p>
Usage of Air Freshener	 <p>Clip type air freshener likely to damage or break air vents during removal.</p> <p>Solvent based air freshener may react with plastic parts and cause breakage.</p> <p>Gel based air freshener recommended to avoid air vent damage.</p>

# NEW NISSAN MAGNITE



## DESCRIPTION

### Auto Door Lock Activate/Deactivate



## NISSAN GUIDELINE

#### Procedure:

To activate or deactivate the door lock mechanism, perform the following procedures.

With engine running, push and hold the Power door lock (center door lock) (Center Door Lock- CDL) switch for more than 4 seconds.

The message will appear as follows in the vehicle information display (Cluster) if the switching operation is successful:  
AUTO DOOR LOCK ON - activated.  
AUTO DOOR LOCK OFF - deactivated.

### Speed Sensing Door Lock



All the doors will get auto locked when the vehicle crosses 7km/h. (when Auto Door lock Function Activated)

### Front Wiping



### Power Window Operation



Low Speed Wiping: Will work on "IGN ON/ENG ON" condition. Variable intermittent & High- Speed: Will work only on "ENG ON" condition.

- The power windows operate only when the engine is ON.
- If the I Key Battery is exhausted, then place the I Key at Center Console 1st Cup holder for Engine ON, I Key Antenna is located at this location.

# NEW NISSAN MAGNITE



## DESCRIPTION

**Vehicle Cranking  
Operation  
(Protect Starter  
Motor)**




## NISSAN GUIDELINE

Do not operate the starter for more than 20 seconds at a time. If the engine does not start, turn the ignition switch off and wait 20 seconds before cranking the engine again (second time). Otherwise, the starter could be damaged.

Follow below instruction:  
After 3 sequences of attempts, if the engine fails to start or requires many attempts to start, please contact nearest authorised dealer.


It is applicable only if manual key is equipped.

## Vehicle Startability

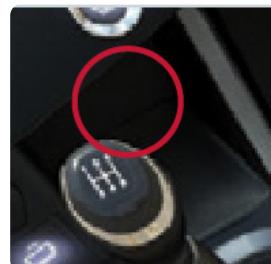

Do not activate the starter if engine is running or in geared condition. It may damage the starter.

Applicable Variants: Base, Mid.

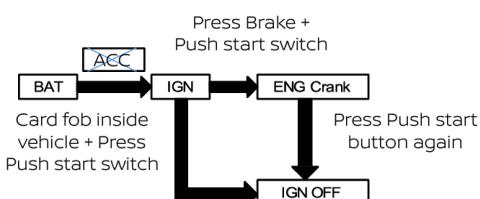

IGN ON > IGN OFF in following conditions:

- A - Driver door open/close
- B - Lock vehicle by Card FOB
- C - Removal of Card FOB from Card Slot
- D - 3 MINS time elapse since IGN ON

Note: ACC mode not available in UPR & PRE-Variants.

# NEW NISSAN MAGNITE



## DESCRIPTION

### Emergency Start



## NISSAN GUIDELINE

Emergency Start:  
1 Key to be kept at FR Center Console 1st Cup Holder, because 1 Key antenna located at this location.

### Emergency Door Opening



Emergency door open:  
If the card fob (intelligent key) battery is low, vehicle door cannot be opened by door request switch.  
Then please use mechanical key attached with card fob to open the door.

## NOTE 1 : OPTIMUM GEAR SHIFT RANGE

### VEHICLE HANDOVER EXPLANATION KIT,

Optimum speed range for gear shift	
UP SHIFT	SPEED (Km/h)
1st to 2nd	21.0
2nd to 3rd	33.3
3rd to 4th	45.5
4th to 5th	59.6

## NOTE 2 : FUEL CONSUMPTION - MANUAL CALCULATION METHOD

**Step 1:** Fill the tank to full by using auto cut-off mode on the fuel gun at the fuel station.

**Step 2:** Set trip meter reading to zero & drive for at least 100 km at a moderate speed.

**Step 3:** Again, fill the tank using auto cut-off mode at the same fuel station. Note down the quantity of fuel filled - X liters.

**Step 4:** Check the trip meter reading for the distance driven - Y kms.

**Step 5:** Calculate average fuel consumption (km/l) = Y / X.

# NEW NISSAN MAGNITE



## DESCRIPTION

Headlight high beam operation

## NISSAN GUIDELINE



Avoid Operating LED Headlamp during Engine OFF, especially low battery condition.

## AUDIO USAGE (If equipped)



Bluetooth Connection

Ensure your mobile phone has Bluetooth version 3.0 or above.

Steps to connect new BT:

Step 1: Go to home screen.

Step 2: Settings > Devices > BT options > BT ON.

Step 3: Switch on BT in your mobile phone.

Step 4: Devices > Device manager > Add device - OK > Search device > BT only > Select your device > Allow access > Pair.

Steps to connect existing BT:

Steps to follow if your phone is already in BT connected list:

Follow Step 1-3 as above.

Step 4: Smart phone integration > List of devices > Select your device > Allow access > Pair.

\*BT - Bluetooth

AMT Gear shifting Tips.



1. Fully depress the brake pedal to shift the lever from "N" to "D" or "R".
2. Never shift to "R" position while the vehicle is moving forward.
3. Never shift to "D" position or manual shift mode while the vehicle is moving rearward.
4. In manual shift mode do not drive at high speeds for extended period in lower than 5th.
5. AMT overheated - If the gearbox overheating warning message is displayed in the cluster, stop the vehicle in a safe place and wait for the clutch to cool down and warning goes off.

# NEW NISSAN MAGNITE



## DESCRIPTION

CVT Gear Handling tips

## NISSAN GUIDELINE

### Do's :



Press brake pedal fully while shifting gear lever from P → R.



Press the gear lever knob switch fully while shifting gears from P→R, R→N, N→D, D→L.



Always handle the gear knob from top side.



### Don'ts :



Partial pressing of brake pedal will not engage gear lever shifting & may require more effort.



Don't press the switch knob switch partially while shifting.



Handling the gear knob from sideways may result high effort.



### General Instruction:

1. Press the brake pedal to stop the vehicle instead of using the parking mode.
2. Always keep vehicle in parking mode at stop condition.
3. Use **L (Low)** mode position when climbing steep hills slowly or driving slowly through deep snow, sand, or Mud.
4. Don't drive vehicle in simultaneous brake and accelerator use.

# NEW NISSAN MAGNITE



## DESCRIPTION

### Magnite AMT Do's & Don'ts

#### Do's

- After switching ON the ignition need to wait for 3 second to start the engine. During this 3 second system will do the self-learning process.
- Before cranking the engine press the brake pedal and wait for 3 second. During this action system will do the complex teaching process.
- After starting the engine, the engine reaches 1000 RPM or above, Don't move the vehicle wait for some time until the engine RPM reached to 800RPM.
- Always change the gear mode once the 0 speed appears on the cluster.

#### Don'ts

- Always apply gradual acceleration when driving or moving the car.
- Never shift into reverse (R) gear while the vehicle is moving forward. In heavy traffic, avoid accelerating as the vehicle is equipped with a creeping function. You can drive the vehicle at 0 km/h in traffic without applying acceleration.
- If the gearbox overheating warning appears on the dashboard, stop the vehicle and allow the clutch temperature to normalize before resuming driving. The warning will disappear once the temperature returns to normal.
- If the vehicle's battery is drained, do not attempt to jump-start it. Contact an authorized Nissan dealer for assistance.
- Never have the vehicle repaired by an outside workshop technician. Always seek service from authorized personnel.


## NISSAN GUIDELINE

# NEW NISSAN MAGNITE




## DESCRIPTION

### BT Device Scanning

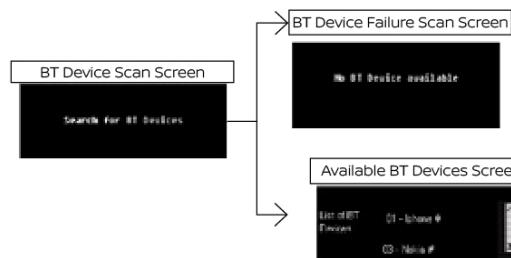

Select the "Scan device" in the TEL Menu screen Radio should enter the BT Device Scan Screen directly (The BT Activation Request Screen will not be displayed anymore). "BT Device Scan Screen" and displays the lists of the "Available BT Devices Screen". If no device could be found, then the Radio displays "BT Device Failure Scan Screen".

### Simple and Legacy Pairing Screen

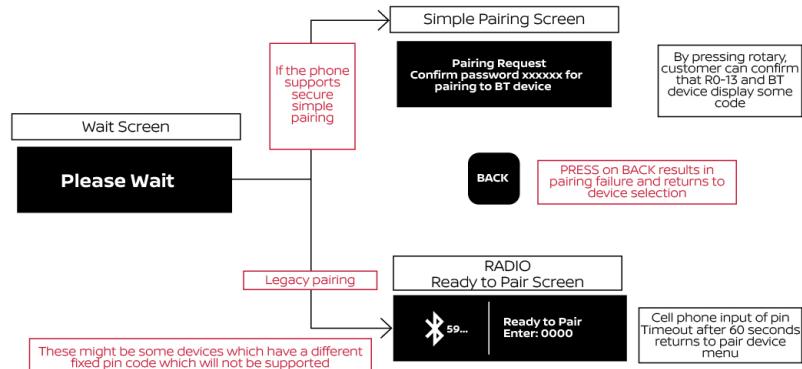

Push the rotary encoder radio will initiate the process of pairing requesting passkey confirmation.

# NEW NISSAN MAGNITE



## DESCRIPTION

### Pairing

## NISSAN GUIDELINE

Pairing in Progress


Pairing...

Pairing Failure Screen

Pairing  
Failed

Accept the pairing Code to pair.  
If code doesn't match, then it shows pairing failed.

### Connecting

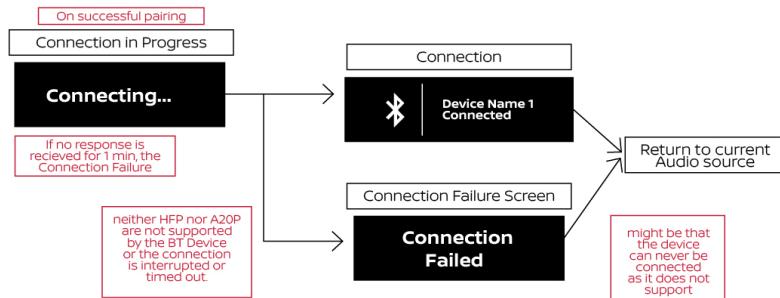


After successful pairing, it will show the device name.  
Otherwise, it shows connection failed.

# NEW NISSAN MAGNITE



DESCRIPTION	NISSAN GUIDELINE
<p><b>Around View Monitor / Reverse Camera</b></p>	 <p>Bird view + Front View      Side view + Front View</p> <p>Gear Position: Reverse</p> <p>Bird view + Rear View (auto)      Side view + Rear View</p> <p><i>Ensure it is safe before manoeuvring.</i></p>
<p><b>To activate Around View Monitor function</b></p>	<p><b>When Gear Position is changed to Reverse:</b></p> <p>Automatically Bird's-eye view + Rear view will appear on the Infotainment display.</p> <ul style="list-style-type: none"> <li>» Touch Camera icon to toggle from (Bird's-eye view + Rear view) to (Left Side-view + Rear view).</li> </ul> <p>AVM Screen exits if reverse gear is disengaged when Gear Position is Forward/Neutral:</p> <ul style="list-style-type: none"> <li>» Touch camera icon on Infotainment to display Bird's-eye + front view display. Touch Camera icon again to toggle (Bird's eye + front view) to (Left Side view + front view) display.</li> </ul> <p>AVM Screen Exits, on next press of the Camera switch (or) if vehicle speed is above 10 km/hr. (or) AVM system No operation for three minutes.</p>

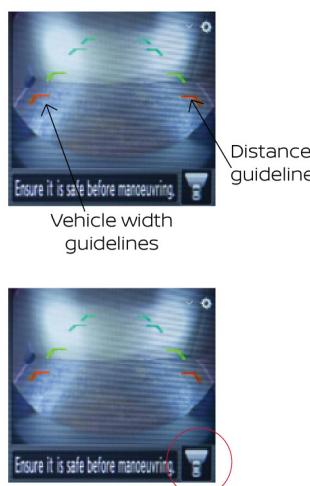

**Static Guidelines:**  
Green, Yellow, Red static lines provide information on visual distance of obstacles from the vehicle.



**Vehicle Icon:**  
Provides information on the existing camera view display screen.

# NEW NISSAN MAGNITE



## DESCRIPTION

Steps to connect mobile with audio  
Wired/Wireless

## NISSAN GUIDELINE

### Android auto/Apple car play (\*AA/ACP):

1. Download & install AA app from Google Play Store for phones with android version below 9.0.
2. AA installed by default in android version 9.0 & above.
3. ACP is installed by default in iPhone.



### Connection procedure-Wireless:


Compatible OS: Android version 11.0 & above, iPhone 5 or at least iOS 7.1 and above.

Step 1: Switch on BT & Wi-Fi in mobile phone.

Step 2: Follow below steps on audio.

Settings > Devices > Wi-Fi Options > Set present country frequency > BT, Wi-Fi options > BT, Wi-Fi ON > Device manager > Add > Search device > Select your device > AA/ACP.

Step 3: Select AA, ACP icons in audio unit to launch android auto or apple car play.

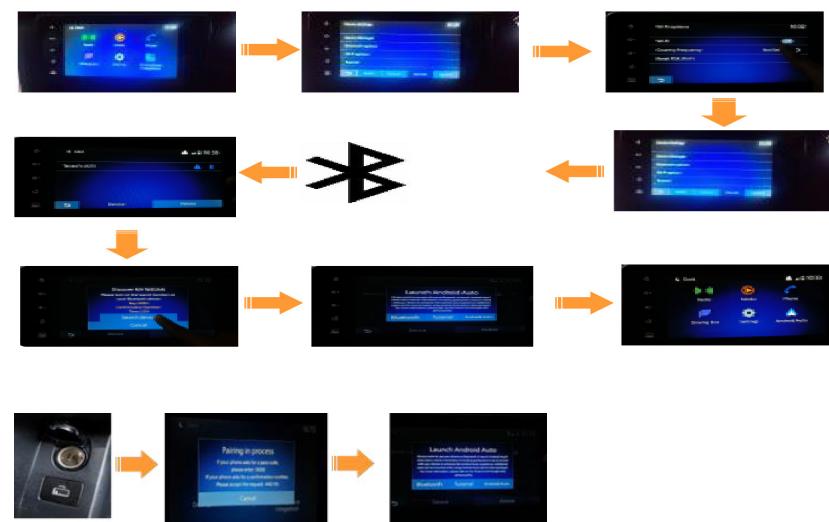

### Connection procedure-Wired:

Compatible OS: Android version 8.0 & above, iPhone 5 or at least iOS 7.1 & above Ensure high-quality USB cable is used, preferably cable provided by phone manufacturer.

Step 1: Insert USB cable in port at centre console and in mobile.

Step 2: Pairing pop-up screen will appear.

Step 3: Select on AA/ACP launch pop-up to launch AA/ACP.

# NEW NISSAN MAGNITE



## DESCRIPTION

Android Auto  
Apple car Play  
Do's & Don'ts,  
Disclaimer

## NISSAN GUIDELINE

### Do's :

- Do check & keep updated software regularly.
- Do use high-quality USB cable for stable connection.
- Do allow all required permissions.



### Don'ts :

- Don't use battery saver mode while driving.
- Don't multitask with data-intensive apps.
- Don't overload Bluetooth & wi-fi connections.
- Don't place the phone in areas where signal is poor.



### Disclaimer:

1. AA/ACP connectivity (both wired & wireless) depends on mobile support.
2. AA/ACP may still be affected by unavoidable environmental factors (Industrial areas, high voltage lines & defence areas etc.,)
3. Mobile's battery level, software bugs (in mobiles) may also affect wireless AA/ACP connectivity.
4. Clearing the background apps may affect the function.
  - AA-Android auto.
  - ACP-Apple car play.



# NEW NISSAN MAGNITE



## DESCRIPTION

Audio  
Display OFF

## NISSAN GUIDELINE



To switch OFF/ON the audio -short press the highlighted icon in the picture.

To restart the ULC – Long press the highlighted icon in the picture.

## PROPER REVERSE GEAR OPERATION - AMT

### AMT R Gear Operation



Recommended to engage "R" only when vehicle is at complete standstill.

If Reverse gear cannot be engaged after gear shift lever shifted from "N" to "R", the system will retry shifting automatically. This will take some time; noise may be heard from gears. This however does not indicate any malfunction.

If Reverse is still not working, with Buzzer and Cluster warning message "Check Auto Gear Box/ Check Gear Box", follow below steps.

Step-1: Shift to "N"

Step-2: Shift to "R" again to move vehicle in Reverse.

To erase cluster warning message, do a key off and key on.

Shift "N" to "R" to "N"

### Advantage of using genuine accessories

**NISSAN**

Guaranteed Quality and Performance Rigorous Testing: Genuine accessories undergo extensive on-vehicle strength testing to meet Nissan's strict standards for quality, durability, and performance.

Maintained Performance: Using authentic parts ensures your vehicle maintains the original performance, efficiency (like fuel economy), and reliability it was engineered for. Certain aftermarket parts can cause airbags not getting deployed during accident or fire to Magnite due to short circuit.

Warranty Protection Preserves Vehicle Warranty: Using non-genuine parts can sometimes risk voiding your vehicle's original warranty, especially if the aftermarket part causes a failure. Genuine parts maintain your warranty coverage.

# NEW NISSAN MAGNITE



## DESCRIPTION

Points to remember while refuelling



## NISSAN GUIDELINE

For accurate information on cluster, please follow below refuelling guidelines:

1. Ignition should be switched off before refuelling.
2. Wait for 15 seconds before refuelling.
3. Refill a minimum of 5 liters of fuel.
4. Ignition should not be turned ON during refuelling.

If any of the above conditions are not met, the cluster may not show the updated fuel level. It can be corrected by following all the above conditions during next refill.

Advanced air purification



Cleans the Air dust & ultra-fine particles before it sticks to cabin surfaces.

Produces +ve & -ve ions which can kill the microbes (Viruses, Airborne bacteria, Odour).

How to use it: Switch ON the Blower, Ionizer (Advanced Air purifier) is activated.

Armrest:  
Storage, Rear Air vent & USB



Armrest can store up to 1.8L storage.

Storage can be accessed by opening the top lid of arm rest.

Type C port is provided in the Arm rest back side.

# NEW NISSAN MAGNITE



## DESCRIPTION

Storage: cooled  
Glovebox



## NISSAN GUIDELINE

At hot ambient conditions liquid bottles can be stored & used.

Things can be stored:  
Water bottles / Beverage bottles (up to two 1-liter bottles)

350 ml Tin can beverages (up to 8 cans),  
Tissue box.

Temperature maintained in cooled  
glovebox is same as AC Temperature.

Ambient light  
(if equipped)



How to use it:  
Separate switch is provided below the audio unit alongside of ajar switch.



Each time the switch is pressed, the color will change (white, cyan, red, yellow).  
Long press of the switch will lead to mood light Off (5 secs).  
To Turn ON – IGN ON Or Press the switch one time.

Auto head lamp  
(if equipped)



As soon as the car enters a dark area the vehicle automatically turns on the headlight (Only Low beam) for the driver.

Head lamp will switch off automatically once the vehicle is turned off & Driver side door is opened from inside.

How to use it:  
To use this mode, Keep the lamp switch in auto position as shown in image.

# NEW NISSAN MAGNITE



DESCRIPTION	NISSAN GUIDELINE
<p>Remote engine start Activation &amp; Deactivation (if equipped)</p>	<p></p> <p>Customers can start their vehicle from a distance of 60m by using this feature.</p> <p><b>How to use it:</b></p> <p>Vehicle should be in Parking Mode. Press Lock button + Remote Engine Start button 2 seconds in I KEY &gt; Engine will be started for 10 minutes duration.</p> <p>To extend the time duration, press the Remote Engine Start button again for 2 seconds &gt; duration extended for 20 minutes.</p> <p><b>To Deactivate/stop the Engine:</b> System will stop the engine Automatically after end of 10 minutes (or extended to 20 minutes).</p> <p><b>Manual method to stop:</b> To stop or turn off the engine immediately, press the unlock button on the I KEY.</p>

# NEW NISSAN MAGNITE



## DESCRIPTION

Walk away lock  
Function  
(if equipped)



## NISSAN GUIDELINE

Vehicle will be locked automatically by the walk-away lock function when all doors are closed.

This feature will operate only if the I KEY & Vehicle at a proximity distance of 1.2m max.

### How to Use:

- Vehicle will get locked automatically when all the doors are closed within the distance of 1.8m.
- Locking will be indicated by 2 blinks of indicator lights for 4 seconds along with beep sound.

Approach  
Un-lock function  
(if equipped)



Vehicle will be unlocked automatically by the approach unlock function.

This feature will operate only if the I KEY & Vehicle at a proximity distance of 0.8m minimum.

### How to Use:

- Vehicle will get unlocked automatically when the I KEY & vehicle at 1m.
- Locking will be indicated by 2 blinks of indicator lights for 4 seconds along with beep sound.

Unlocking will be indicated by 1 blink of indicator light for 1 second along with Ajar warning lights.

# Enjoy Driving Your **NEW NISSAN MAGNITE**



Disclaimer-> †Terms & Conditions Apply, Associated Motorways (pvt) Ltd. reserves the right to make any changes without notice, concerning colours, equipment or specifications detailed in this brochure, or to discontinue individual models. The colours are subject to availability and may not be available across all variants and may differ slightly from those in this brochure. Features and accessories shown may not be standard equipment and are subject to change without prior notice. Please consult your local dealer to ensure that the vehicle delivered is in accordance with your expectations. Accessories shown are not part of standard fitment and are subject to availability. ^Fuel economy as per ARAI certification. ##Nissan approved accessory included from trusted Nissan supplier, they are not 'Nissan Genuine Accessory'. Warranty on such accessories is supported by supplier & is limited to 1 yr from sales of vehicle. For More details, Contact Nissan Dealer. \*Segment defined here refers to B-SUV segment with <4m length & Engine up to 1.2L NA or 1.0L Turbo Petrol. ^Leather mentioned in the features refers to synthetic leather/leatherette. ^^^With 2nd row seat fold condition (60:40 Seat split standard feature) \*\*Weight corresponds to top end variant. #Standard warranty of 3 years or 100K kms whichever comes earlier. PlasmaCluster® is a registered trademark of the Sharp Corporation. Android Auto™ and Apple CarPlay™ are registered trademark. Arkamys® is a registered trademark. Please consult an authorised Nissan dealer for latest information on features/specifications before deciding to place an order

Information updated as on Dec-2025



**03 YEARS OR  
100,000 KM**  
MANUFACTURER WARRANTY

**Hotline: (+94) 117 609 609  
No: 185, Union Place, Colombo 2, Sri Lanka.**